


Tactic Vans Under Cabinet for hymer Grand Canyon S


Thank you for your purchase, with the main product, the powder coated aluminum plate, you have received two other kind of parts:

-5 screws and spacers to install the plate

-8 hooks



- 1) Take a pencil and position the aluminum plate below the cabinet. Use the left corner of the bottom of the cabinet as a square to make sure you are installing the plate at the right place.
- 2) Mark with the pencil the places you are going to drill the holes for the screws to support the plate. Those are the smaller holes that you see here below (number 1 to 5)
- 3) Drill the holes with a 8mm drill for wood.

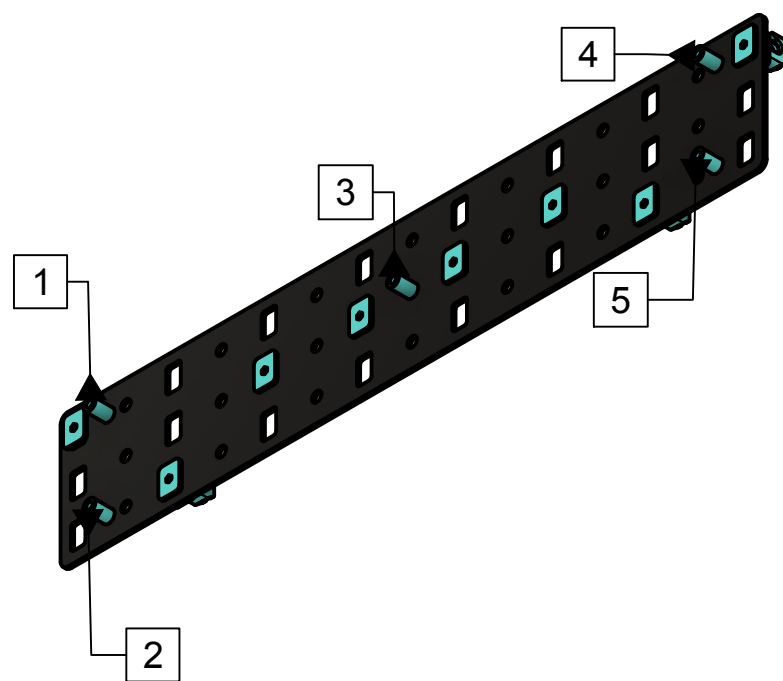

- 4) To not force the interior wood of the vehicle when installing the screws to support the plate, we suggest having someone helping you hold the plate while you insert the screws.



The cylindrical spacers are to be put in between the cabinet and the plate.



We recommend that you keep around 5 millimeters of distance from the led light under the cabinet, this allows you to be centered, but since the assembly on the Grand Canyon S is not the pinnacle of precise manufacturing and therefore is not exactly the same on all vans, we cannot provide you with a template.